


SHOCK ABSORBER CARRIER ARM

REMOVAL / REFITTING


- Set the car on a lift and remove the wheel on the side concerned.
- 1. Remove the three nuts fastening the arm
- 2. Position a hydraulic jack with plastic plate under the wheel upright.
- 3. Remove the screws and retrieve the shock absorber carrier arm.

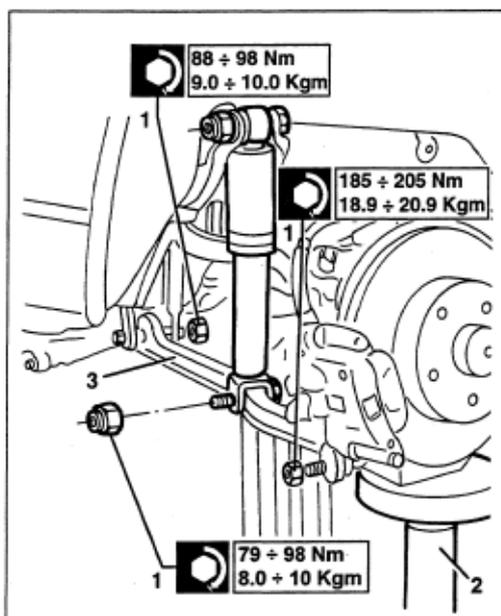

SPRING CARRIER ARM

REMOVAL / REFITTING

- Set the car on a lift and remove the wheel on the side concerned
- Remove the spring (see specific paragraph)
- 1. Slacken the bolt fastening the spring carrier arm to the wheel upright and retrieve the arm

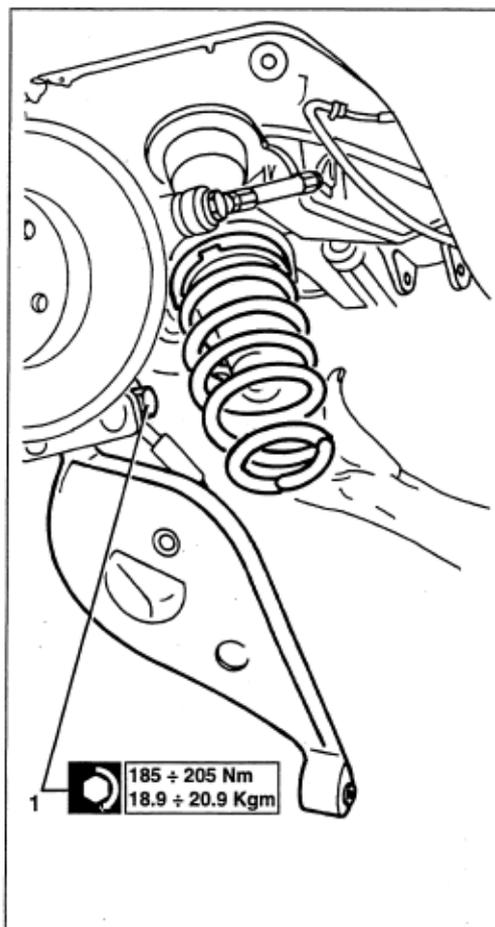

CHECKS AND INSPECTIONS

- Visually check the arm for cracks, signs of wear on the wheel side surface and distortion.
- Check the condition of the flexible parts; if excessive noise or play is noted, replace the arm.