

FUSES		
Fuse	Description	Amperage
F1	SPLITTER ACTUATORS	10A
F4	SECONDARY MASTER	5A
F5	SECONDARY LOADS (SLAVE)	20A
F6	ECM (MASTER)	25A
F7	PRIMARY LOADS ECM MASTER	20A

RELAYS		
Fuse	Description	Amperage
R1	HORN	N/A
R2	A/C CLUTCH	N/A
R6	STARTER SOLENOID 1	N/A
T52	WATER PUMP	N/A
T53	BLOW BY CONTROL	N/A

