


FUSES		
Fuse	Description	Amperage
F31	INT/A POWER SUPPLY (KEY-ON)	7.5A
F33	ELECTRIC WINDOW MOTOR DRIVER'S SIDE	25A
F34	ELECTRIC WINDOW MOTOR PASSENGER'S SIDE	25A
F36	DIRECT POWER SUPPLY FROM BATTERY +30	15A
F37	INT POWER SUPPLY (KEY-ON)	10A
F38	CENTRAL DOOR LOCKING	20A
F42	INT KEY-ON POWER SUPPLY (POSSIBLE USE FOR ECU 6.1)	7.5A
F43	WINDSCREEN WASHER PUMP	20A
F47	REAR ELECTRIC WINDOW MOTOR LEFT SIDE	25A
F48	REAR ELECTRIC WINDOW MOTOR LEFT SIDE	25A
F49	INT KEY-ON POWER SUPPLY	7.5A
F50	INT KEY-ON POWER SUPPLY (POSSIBLE USE FOR ECU 6.1)	7.5A
F51	N/A	7.5A
F53	DIRECT POWER SUPPLY FROM BATTERY +30	7.5A
F94	POWER SOCKETS	15A

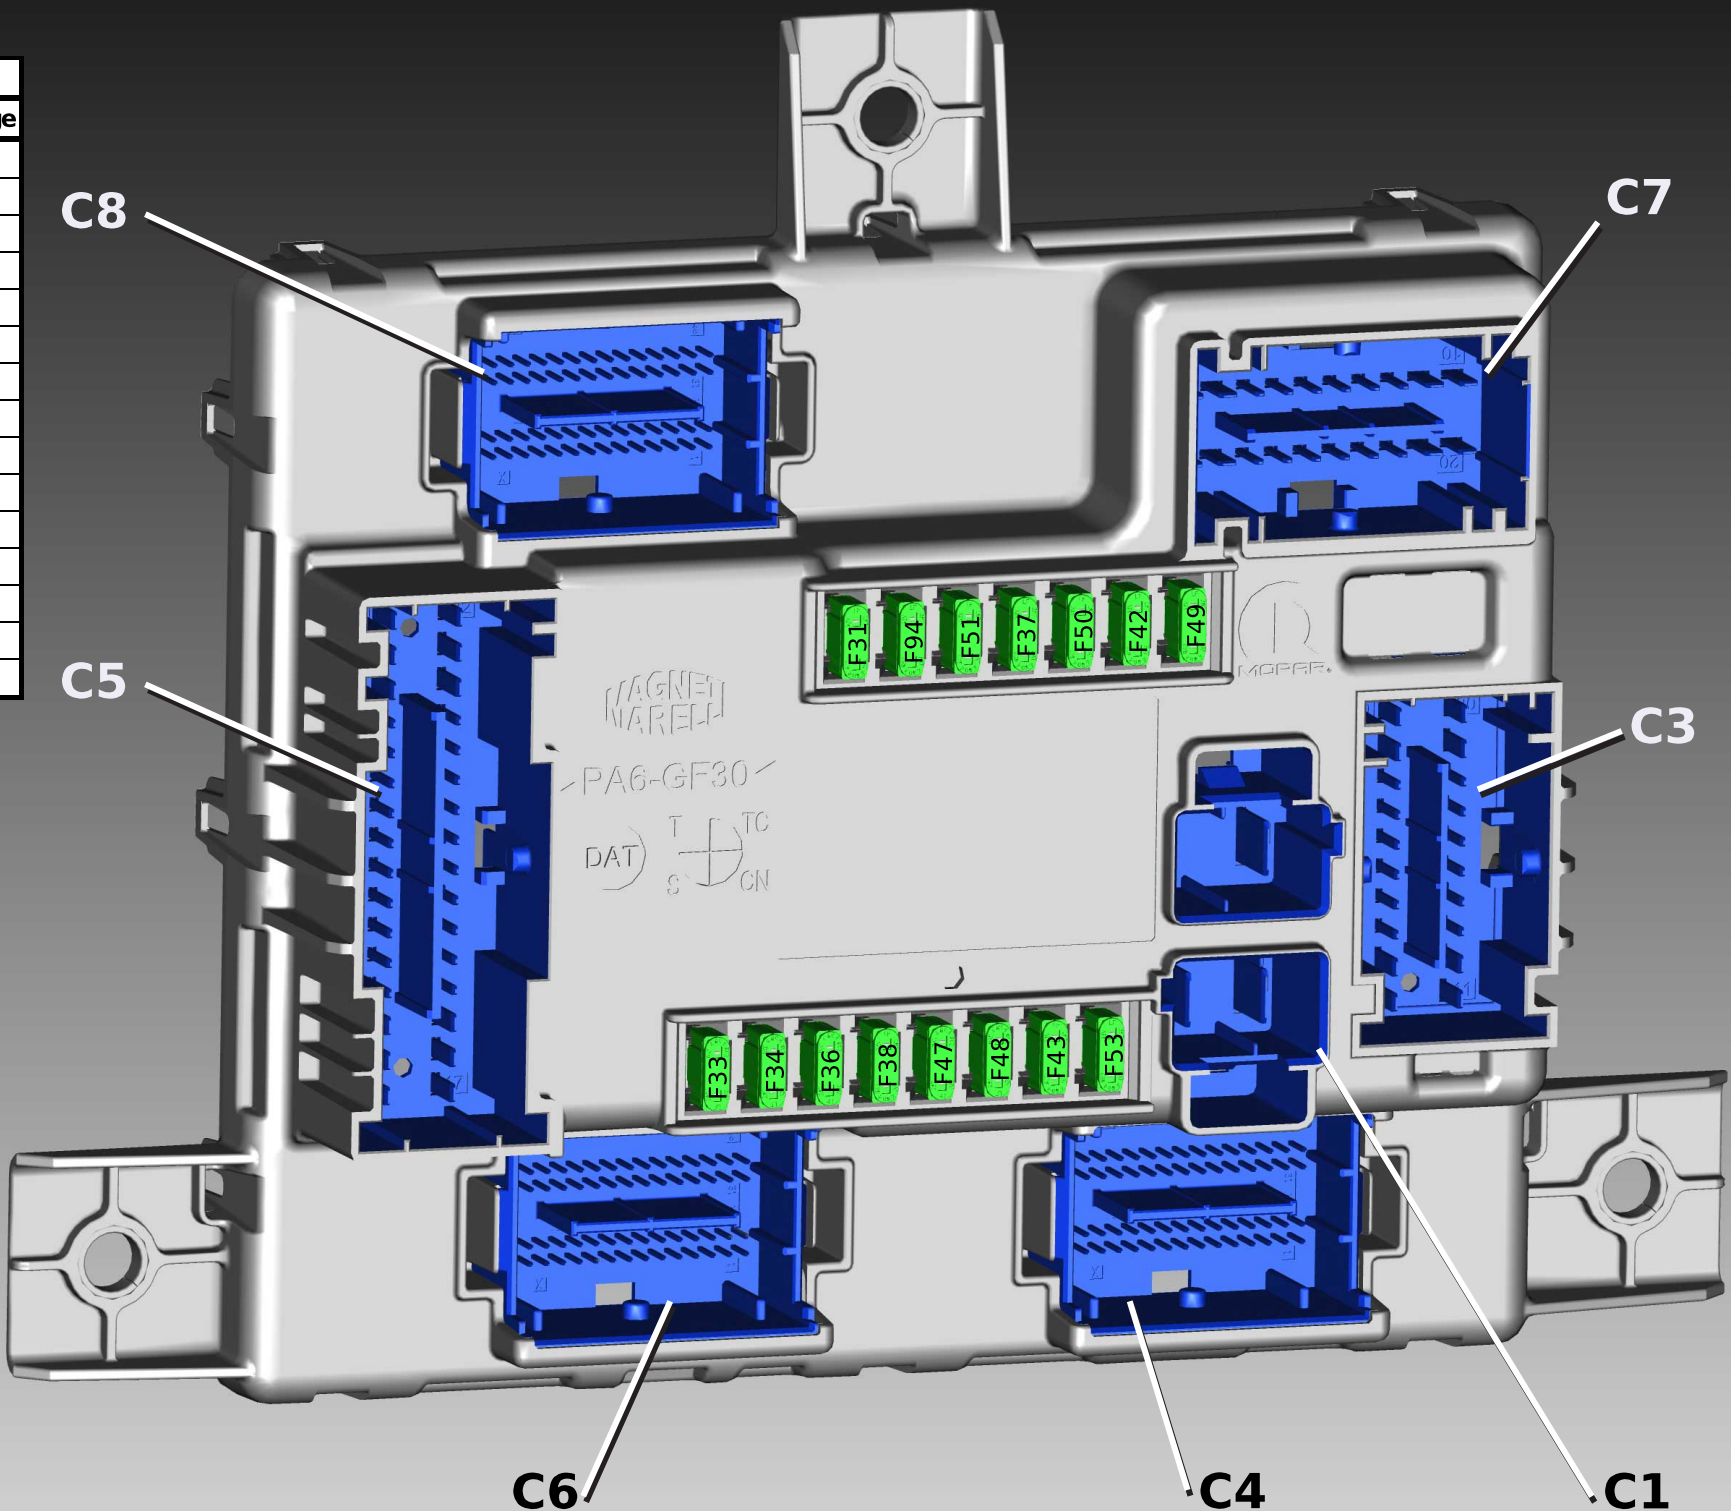

Body Control Module (BCM)