

# ELECTROMECHANIC DEVICES AND INTERMITTENCES

## RELAYS

### LOCATION

The relays are positioned as follows:

- on the central fusebox
- on the boards housed in the front right-hand and left-hand corners of engine compartment.

For locating each device, refer to the following figure, with the aid of table "Relays".

### CHECK

Verify that relays are in conformity with the type shown in table "Relays".

### Location

**1.6** **1.8** **2.0**  **6V iniezione**

**2.0** **turbodiesel**

