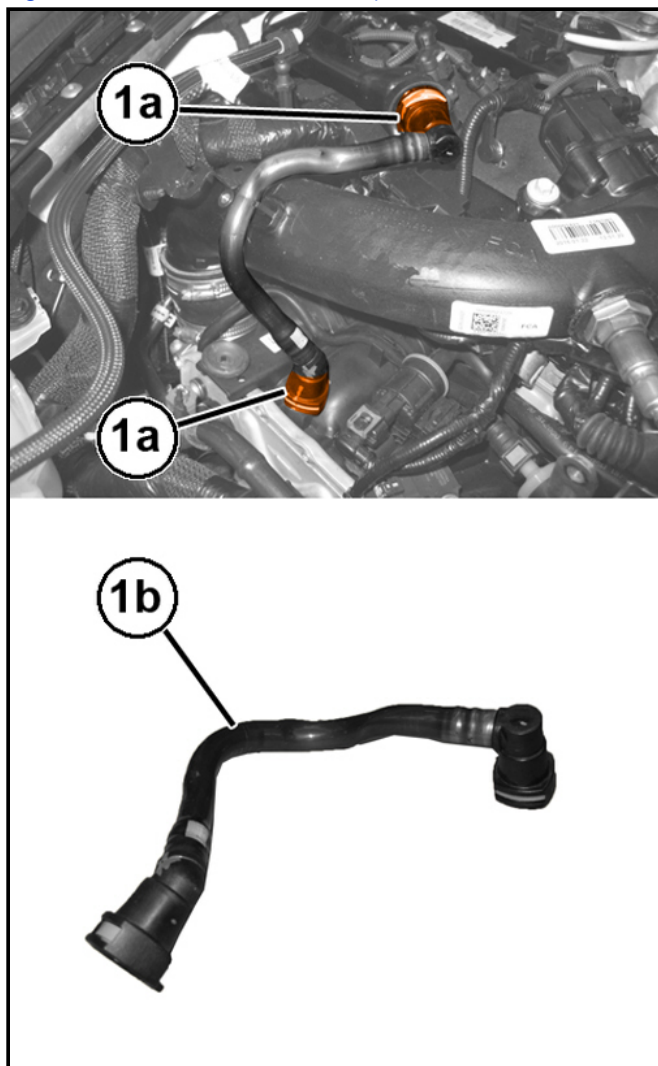


25 - Emissions Control / Evaporative Emissions / TUBE, Crankcase Breather / Removal and Installation**IDLING ENGINE OIL VAPOR INLET LINE****REMOVAL**

1. Remove the engine covers ([Refer to 09 - Engine/COVER, Engine/Removal and Installation](#)).
2. Disconnect the quick couplings (1a) and remove the idling engine oil vapor intake pipe (1b).

**INSTALLATION**

1. Install the engine idling oil vapor intake pipe and tighten the quick couplings.
2. Install the engine covers ([Refer to 09 - Engine/COVER, Engine/Removal and Installation](#)).