


REMOVAL AND INSTALLATION

☑ **Labor Operations:** Click to hide the list of LOPs associated with this procedure

Primary LOP	Related LOP	Description	Skill Level	Skill Category
23140201	-	Console, Overhead - Replace	0 - Low Skilled	1C

REMOVAL

1. Disconnect and isolate the negative battery cable.
2. Using a trim stick or equivalent, release the retaining clips (1b) and lower the overhead console (1a).
3. Lower slightly and disconnect the wire harness connectors (2a and 2b), then remove.

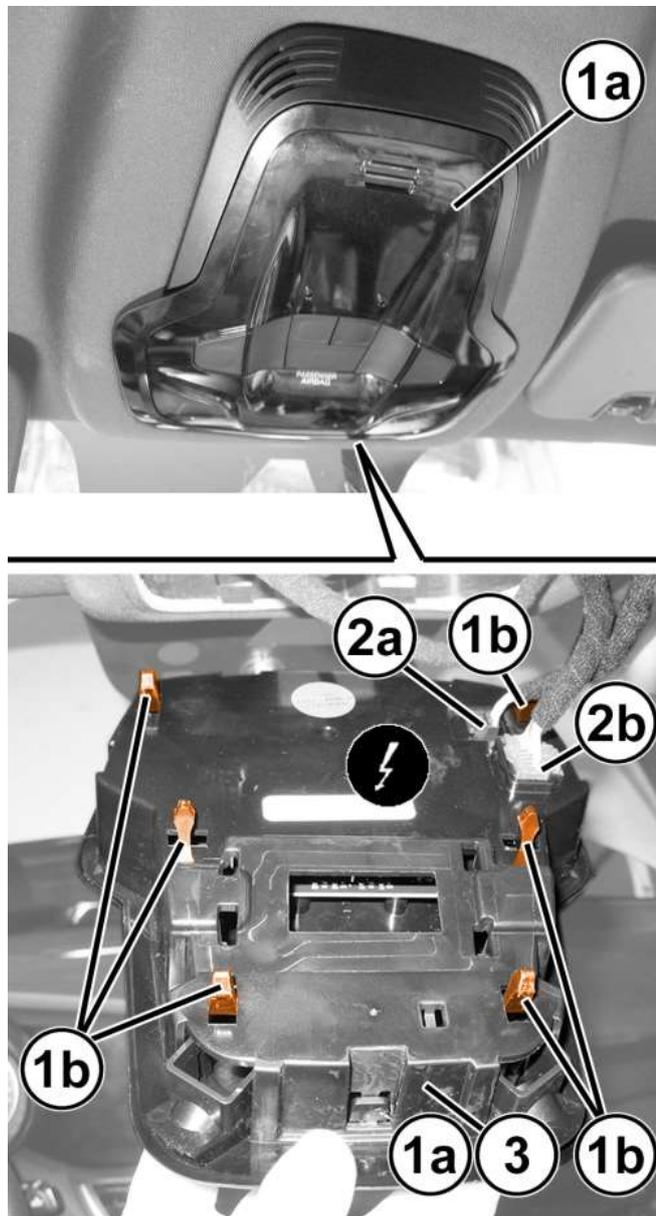

INSTALLATION

1. Connect the wire harness connectors (2a and 2b).
2. Position overhead console (1a) then push up to engage the retaining clips (1b).

