


TRAILER TOW ONLY

FUSES			
Fuse	Alternate	Description	Amperage
F01	FUSE F01 40A	TTM	40A
F01	F01TT	TTM(TRAILER TOW)	15A
F02	FUSE F02 40A	ECUC/CHASSIS DOMAIN CONTROL	40A
F02	F02TT	ECUC/CHASSIS DOMAIN CONTROL (TRAILER TOW)	15A
F03	F03TT	NA (TRAILER TOW)	10A
F04	FUSE F04 40A	HEATED FILTER	40A
F04	F04TT	HEATED FILTER (TRAILER TOW)	10A
F05	FUSE F05 40A	HVAC FAN	40A
F06	FUSE F06 30A	TVMS/SDM(POWER)	30A
F07	FUSE F07 60A	PTC3	60A
F08	FUSE F08 30A	HEFI	30A
F09	FUSE F09 20A	PASSENGER'S ELECTRIC SEAT MOVEMENT	20A
F10	FUSE F10 10A/15A	ANC (SOUND SYSTEM)	10A/15A
F14	FUSE F14 15A	KL30 ATX	15A
F15	FUSE F15 40A	PTC1	40A
F17	FUSE F17 7.5A	KL15A USB RECHARGER	7.5A
F18	FUSE F18 10A	DRIVER'S ELECTRIC SEAT MOVEMENT	10A
F19	FUSE F19 7.5A	KL30 ECUC/CHASSIS DOMAIN CONTROL	7.5A
F20	FUSE F20 25A	POWER SUPPLY FOR DRIVER'S ELECTRIC SEAT + DRIVER AND PASSENGER HEATERS	25A
F21	FUSE F21 10A	DRIVE / USB / AUX PORT	10A
F22	FUSE F22 20A	KL15A 12V POWER SOCKET	20A
F23	FUSE F23 20A	SUNROOF (BCM)	20A
F81	FUSE F81 60A	PTC2	60A
F82	FUSE F82 20A	BCM/FOR KEY RELAY	20A
F83	FUSE F83 30A	FUEL PUMP (2.9V6 / 2.2TDTM)	30A
F84	FUSE F84 5A	TVMS/SDM(ELECTRONIC)	5A
F88	FUSE F88 7.5A	HEATED MIRRORS / HEATED WINDSCREEN WASHER NOZZLES	7.5A
F89	FUSE F89 30A	REAR WINDOW DEFROSTER	30A
F90	FUSE F90 5A	BS	5A

RELAYS			
Relay	Alternate	Description	Amperage
R3	N/A	TRAILER TOW	N/A
T02	N/A	ACTIVE DAMPING	N/A
T07	N/A	PTC3	N/A
T08	N/A	POWER SEAT	N/A
T09	N/A	POWER OUTLET	N/A
T10	N/A	FUEL PUMP	N/A
T17	N/A	REAR DEFROST	N/A
T20	N/A	BLOWER MOTOR	N/A
T31	N/A	FILTER HEATER	N/A

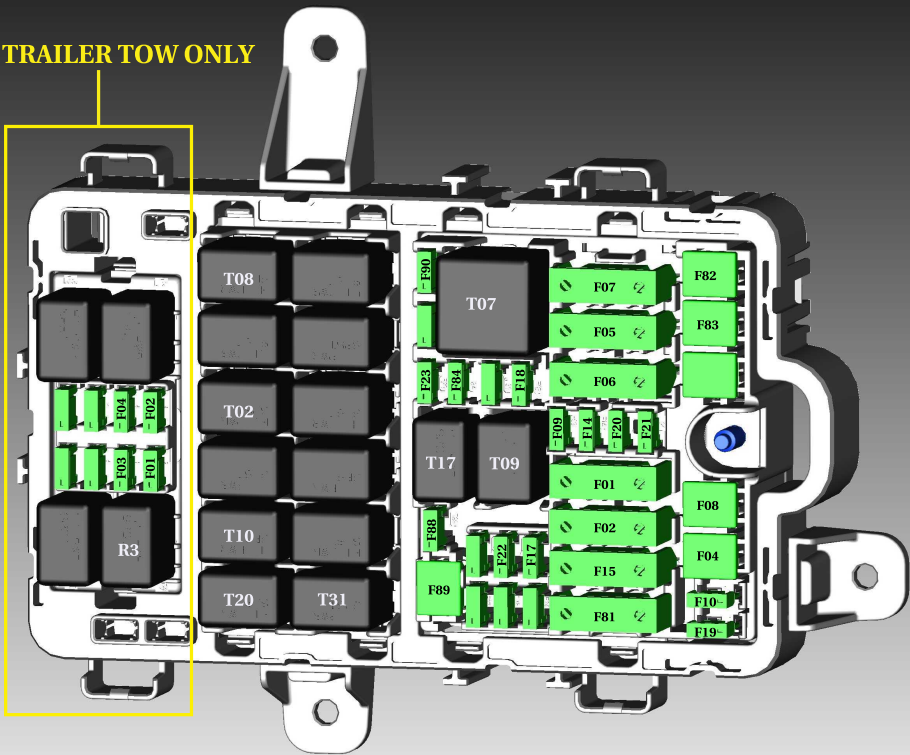

Rear - Power Distribution Center (PDC)