


REMOVAL AND INSTALLATION

REMOVAL - FRONT HALF

1. Remove the wheel, ([Refer to 22 - Tires and Wheels/Removal and Installation](#)).
2. Remove the splash shield (1b) screws (1a).
3. Remove the nuts (2a).
4. Remove the push pin fastener (3a) using a trim stick or equivalent.
5. Remove the splash shield (1b), releasing it from its housing.

INSTALLATION

1. Place the splash shield in position.
2. Install the push pin fastener.
3. Tighten the splash shield screws and nuts.
4. Install the wheel, ([Refer to 22 - Tires and Wheels/Removal and Installation](#)).

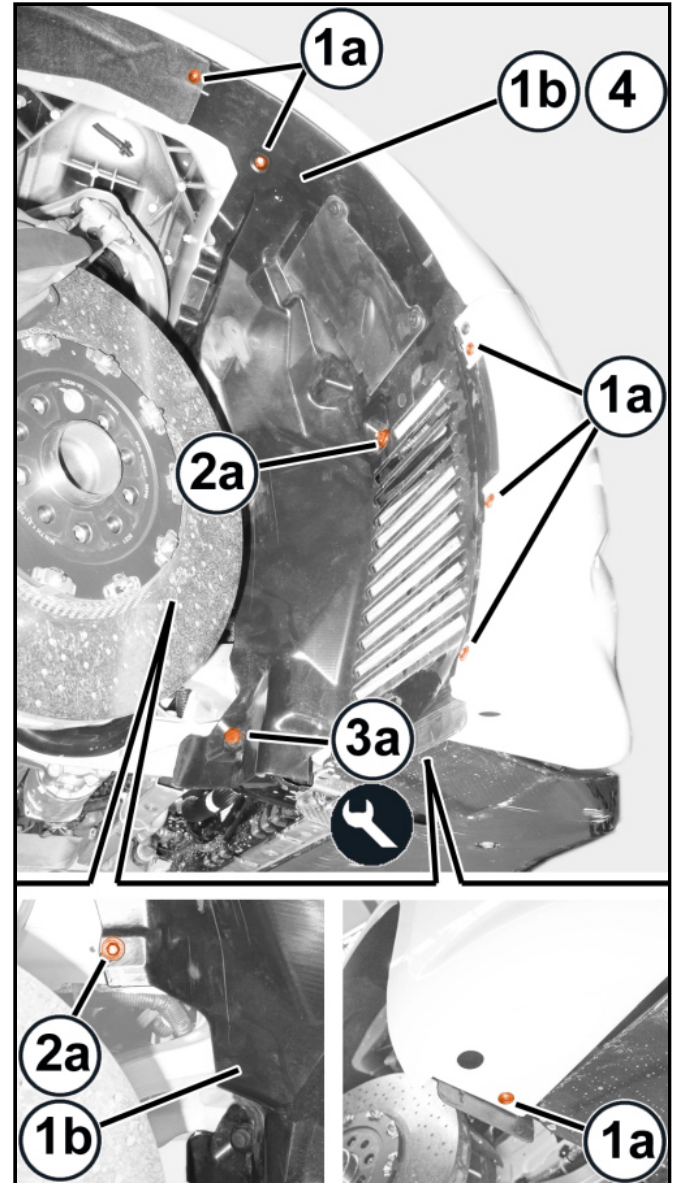

REMOVAL - REAR HALF

1. Remove the wheel, ([Refer to 22 - Tires and Wheels/Removal and Installation](#)).
2. Remove the splash shield (1b) screws (1a).
3. Remove the push pin fasteners (2a) after releasing the center pins using a trim stick or equivalent.

4. Remove the splash shield (1b), releasing it from its housing.

INSTALLATION

1. Place the splash shield into position.
2. Install the push pin fasteners and seat fully.
3. Install in the nut.
4. Install the wheel, ([Refer to 22 - Tires and Wheels/Removal and Installation](#)).

