
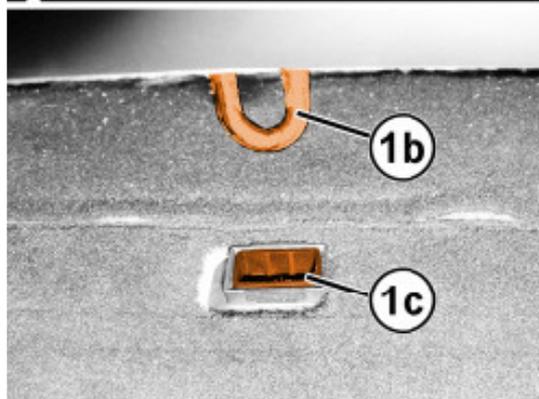


REMOVAL AND INSTALLATION



REMOVAL

1. If equipped, disconnect the center seat belt (2a).
2. Working on each side of the seat, lift firmly at the front of the rear seat cushion (1a) to release the hooks (1b) from the captures (1c).

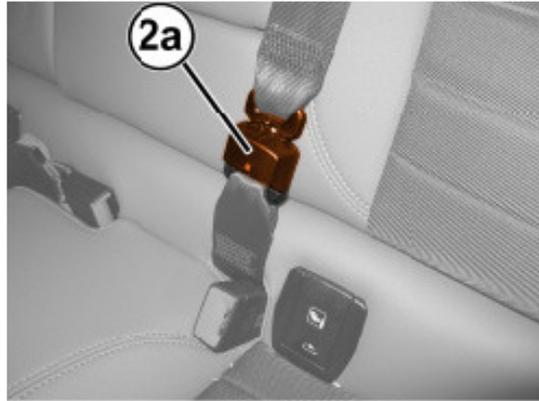

INSTALLATION

1. Route the seat belt (3b) through the seat cushion and install the lower seat belt anchor bolts (3a) ([Refer to 10 - Restraints/Specifications](#)).
2. If equipped with heated seat, connect the wire harness connector (2a).
3. Position the brackets (1b) to the floor brackets (1c) and push the rear seat cushion (1a) rearward to engage.


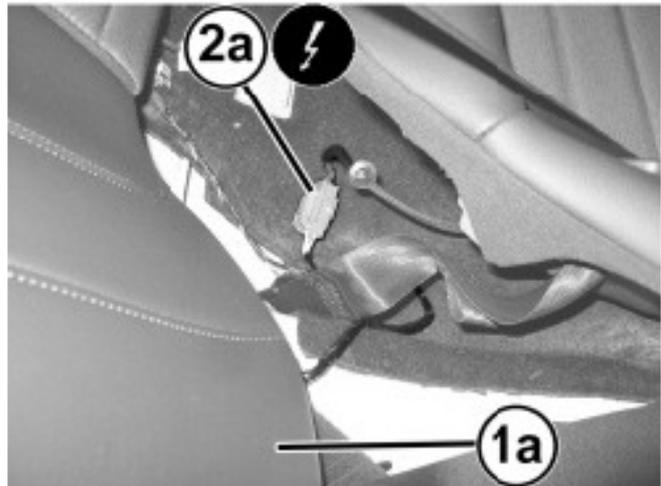
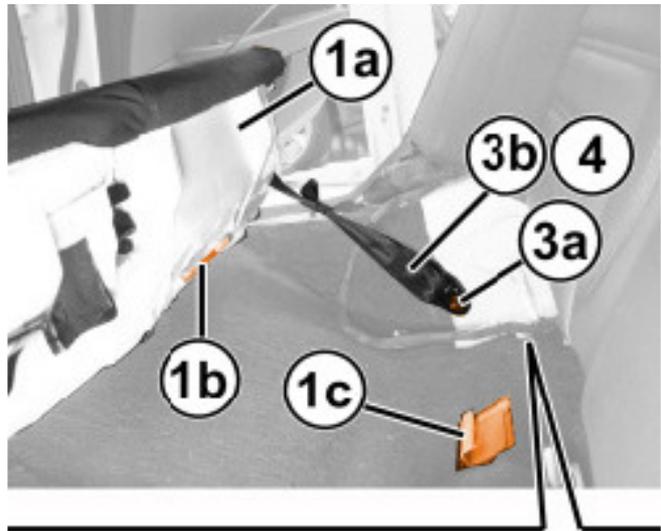


4. Make sure the seat belt tags (2) are positioned properly.

5. Make sure the buckles (3a) are routed through the cushion properly.

6. Working on each side of the seat, locate the rear seat cushion hooks (1b) to the captures (1c) and push down firmly to engage.

7. If equipped, attach the center seat belt buckle (4a).

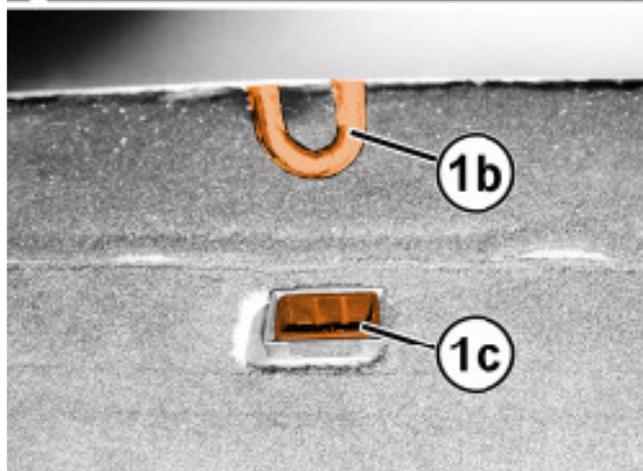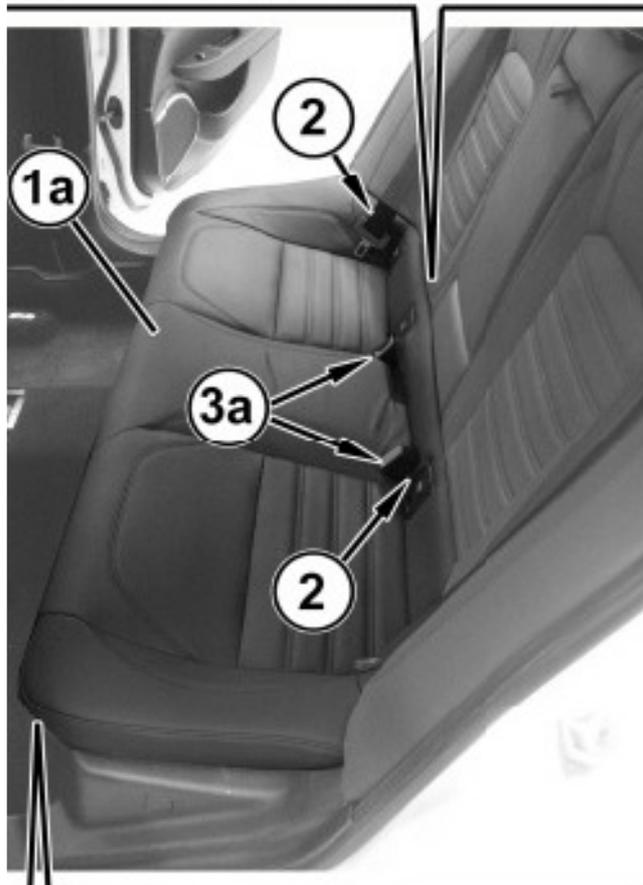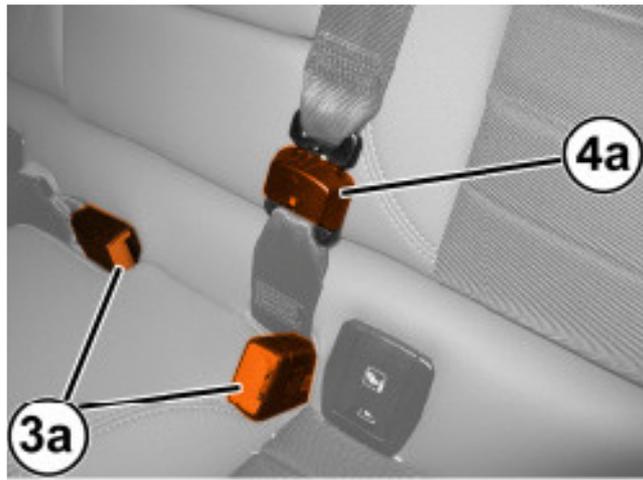



FIXED SEATBACK

Labor Operations: Click to hide the list of LOPs associated with this procedure


No LOP information available for this service procedure.

REMOVAL

1. Remove the rear seat cushion ([Refer to 23 - Body/Seats/Seat Cushion/Removal and Installation](#)).
2. Remove rear seat back (1b) retaining bolts (1a).

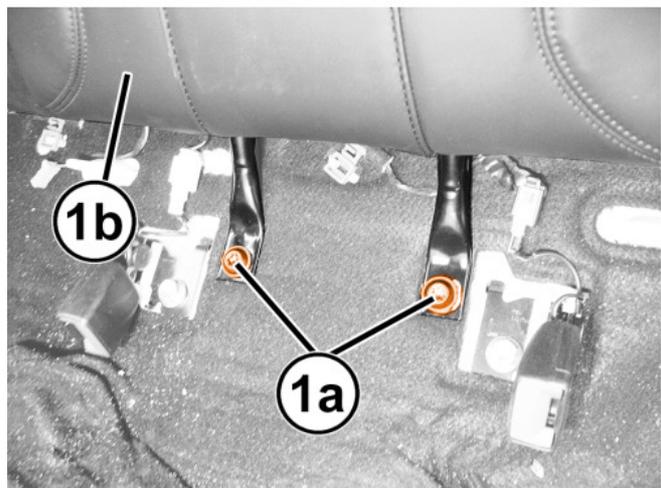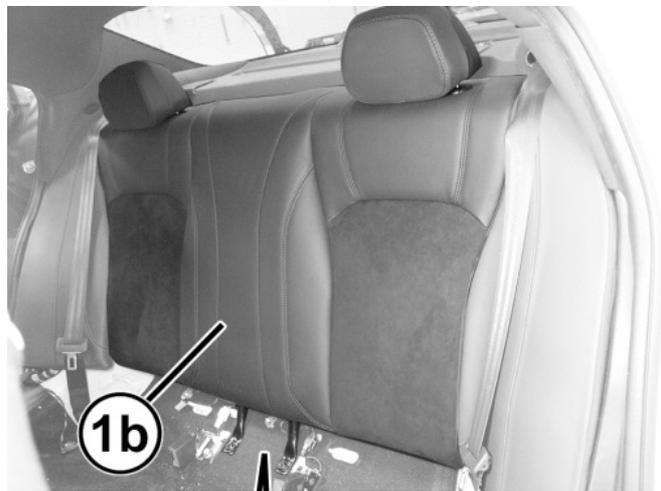


3. Lift and remove the rear seat back retainers (1a) off the brackets (1c) and remove the rear seat.

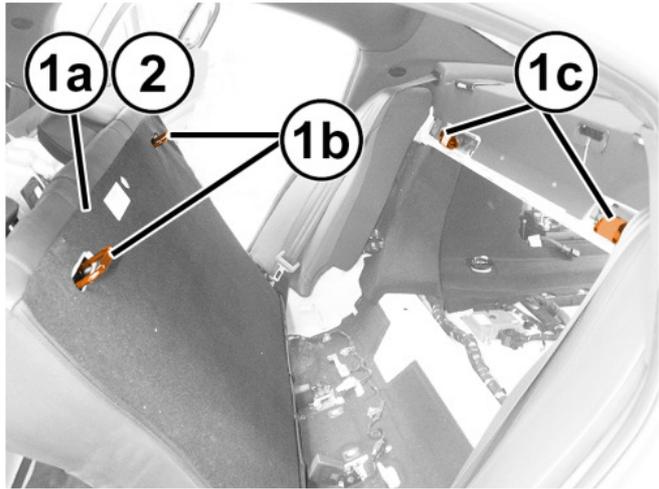

INSTALLATION

1. Hook the rear seat back (1b) onto the brackets (1c).

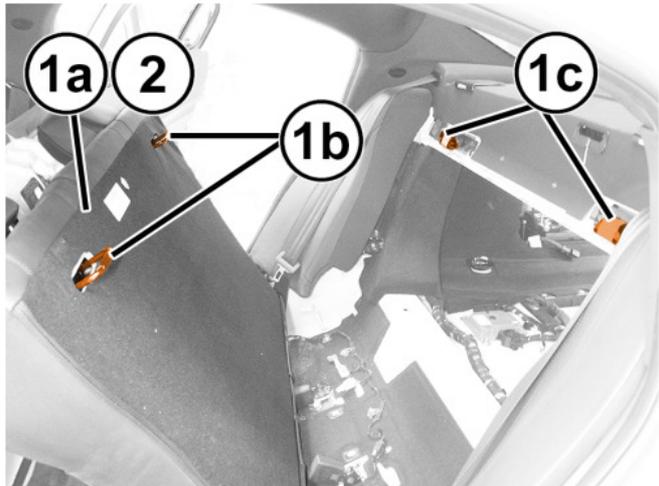

2. Install the rear seat back (1b) bolts (1a) and tighten to the proper [Torque Specifications](#).

3. Install the rear seat cushion [Refer to 23 - Body/Seats/Seat Cushion/Removal and Installation](#).

