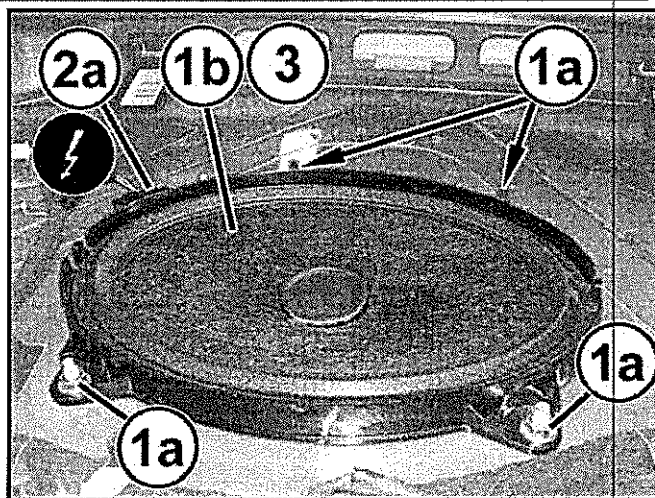



08 - Electrical / 8A - Audio/Video/Entertainment/Connectivity / SPEAKER / Removal and Installation

SUBWOOFER**REMOVAL**

1. Disconnect and isolate the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), disconnect the IBS connector first before disconnecting the negative battery cable.
2. Remove the rear shelf panel (Refer to 23 - Body/Interior/PANEL, Rear Shelf/Removal and Installation).
3. Remove the four subwoofer nuts (1a).
4. Disconnect the wire harness connector (2a).
5. Remove the subwoofer (1b) from the rear shelf.

**INSTALLATION**

1. Position the subwoofer (1b) on the rear shelf.
2. Connect the wire harness connector (1a).
3. Install the four subwoofer nuts (2a) and securely tighten.

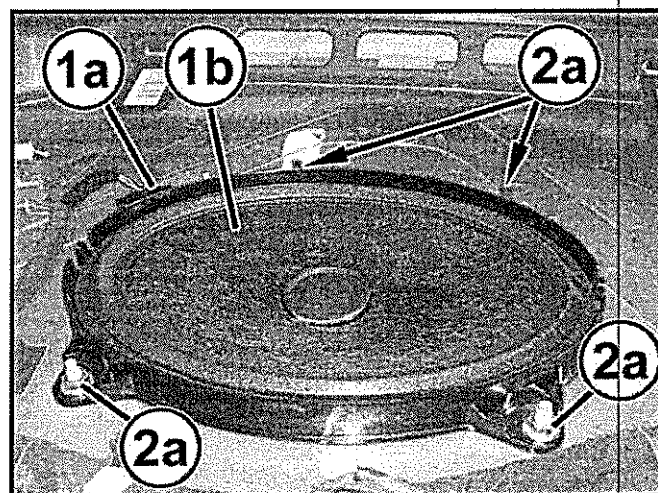


4. Install the rear shelf panel (Refer to 23 - Body/Interior/PANEL, Rear Shelf/Removal and Installation).

5. Connect the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), connect the IBS connector.


23 - Body / Interior / PANEL, Rear Shelf / Removal and Installation**REMOVAL AND INSTALLATION****REMOVAL**

1. Disconnect and isolate the negative battery cable.
2. Remove the rear seat back (Refer to 23 - Body/Seats/SEAT BACK, Rear/Removal and Installation)

3. Remove the fasteners (1) and remove the rear shelf trim panel bezel (2).

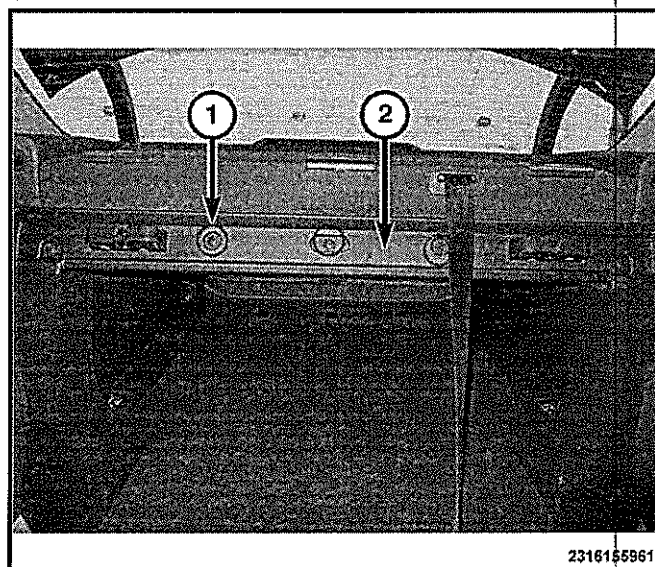


4. Remove the screws (1).
5. Lift the front of the rear shelf panel (2) to release the retaining clips.
6. Pull the rear shelf panel forward to disengage the retaining hook at the rear, then lift off.
7. Pull the rear shelf panel down and disconnect the wire harness connectors, then remove.

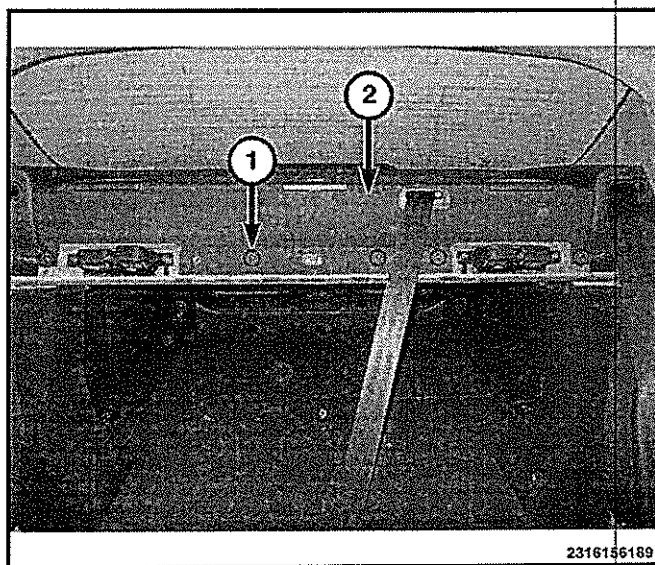


INSTALLATION

1. Before installing, connect the wire harness connectors to the backside of the rear shelf panel (1b).
2. Position the rear shelf panel on the rear shelf, then push rearward to engage the retaining hook.
3. Locate the front retaining clips and hand tap to engage.
4. Install the screws (1a) and tighten securely.

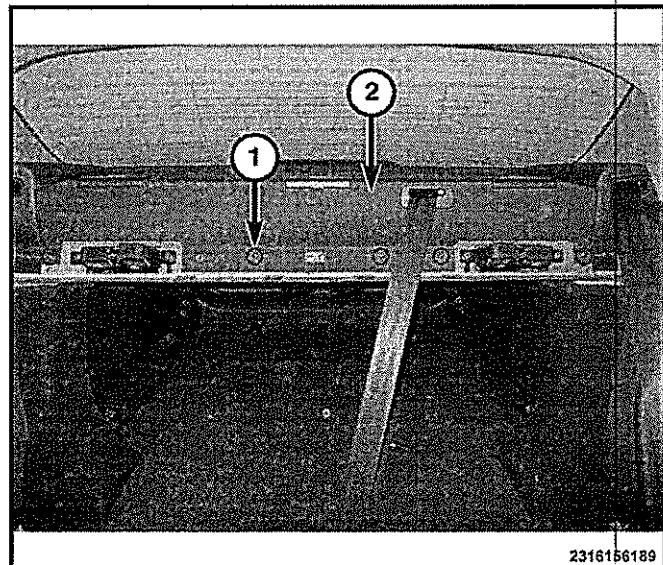

5. Position the rear shelf trim panel bezel (2) to the rear shelf and install the fasteners (1).
6. Install the rear seat back (Refer to 23 - Body/Seats/SEAT BACK, Rear/Removal and Installation).

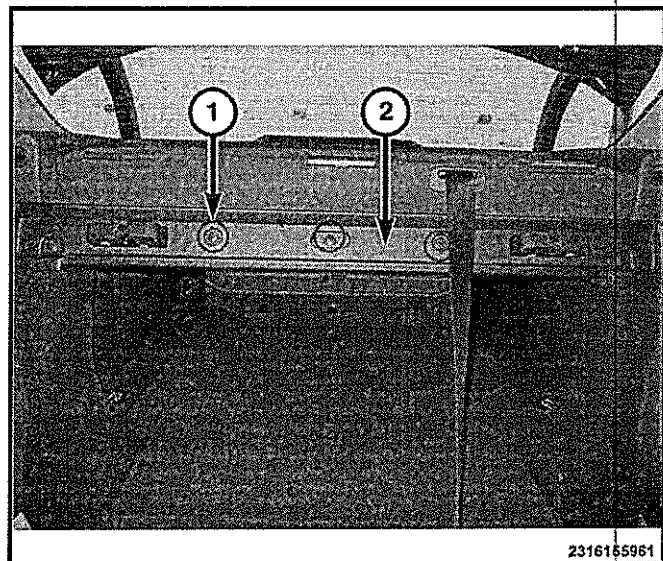



7. Connect the negative battery cable.

23 - Body / Seats, Rear / SEAT BACK, Rear / Removal and Installation**SPLIT SEATBACK****REMOVAL**


1. Release the rear seat cushion (1) and position aside as shown (Refer to 23 - Body/Seats/Seat Cushion/Removal and Installation).
2. If equipped with heated seat backs, disconnect the wire harness connector located under the seat cushion.
3. Remove the rear seat bolster (Refer to 23 - Body/Seats/BOLSTER, Seat/Removal and Installation).
4. Unlatch the seat backs and lower them.

NOTE: The 40% seatback must be removed first.

5. Remove the bolt (1) and pull the 40% seatback (2) off the pivot shaft (3).

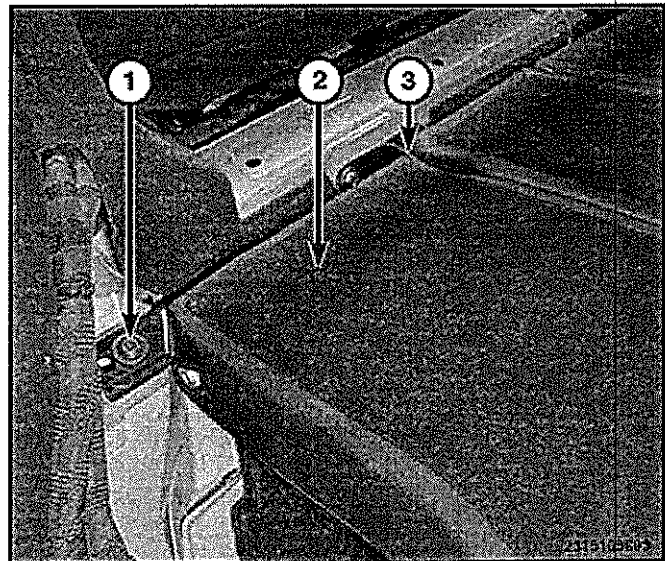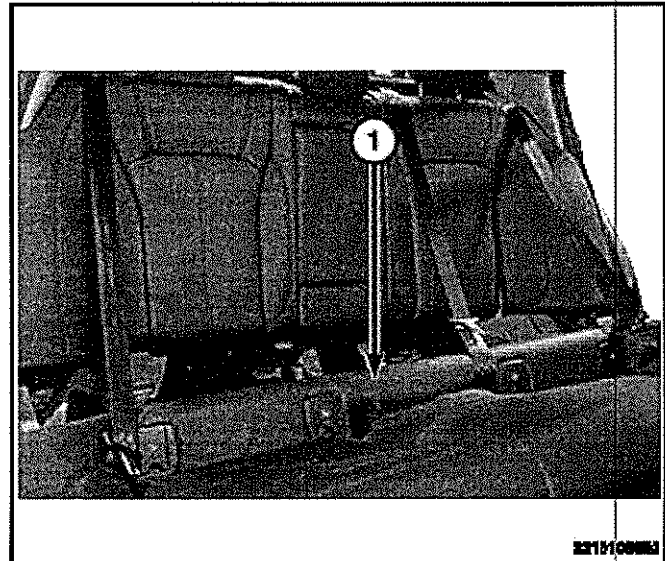

6. Remove the bolt (1) and remove the 60% seatback (2) from the center pivot bracket (3).

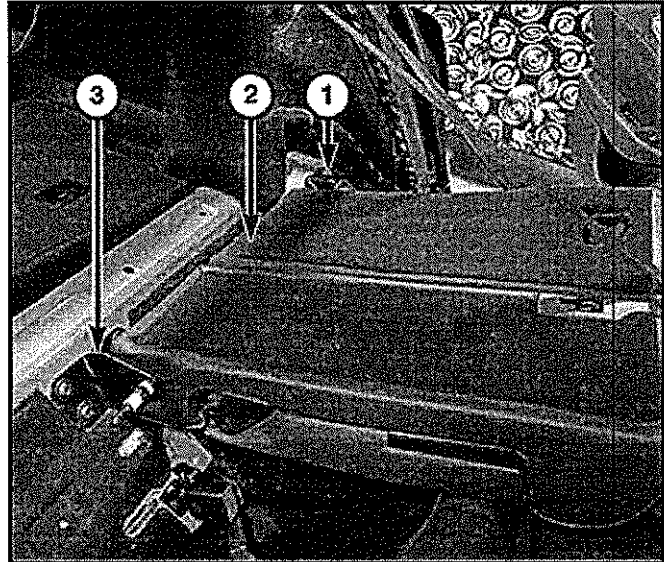

INSTALLATION

1. Install the 60% seatback (2) into the center pivot bracket (3).
2. Install the rear seatback bolt (1) and tighten to the proper (Torque Specifications)

3. Install the 40% seatback (2) on the pivot shaft (3).


4. Install the rear seatback bolt and tighten to the proper (Torque Specifications)

5. If equipped, connect the wire harness connectors for the seat back heaters.

6. Install the rear seat bolsters.


7. Install the rear seat bolster (Refer to 23 - Body/Seats/BOLSTER, Seat/Removal and Installation).

8. Install the rear seat cushion (Refer to 23 - Body/Seats/Seat Cushion/Removal and Installation).

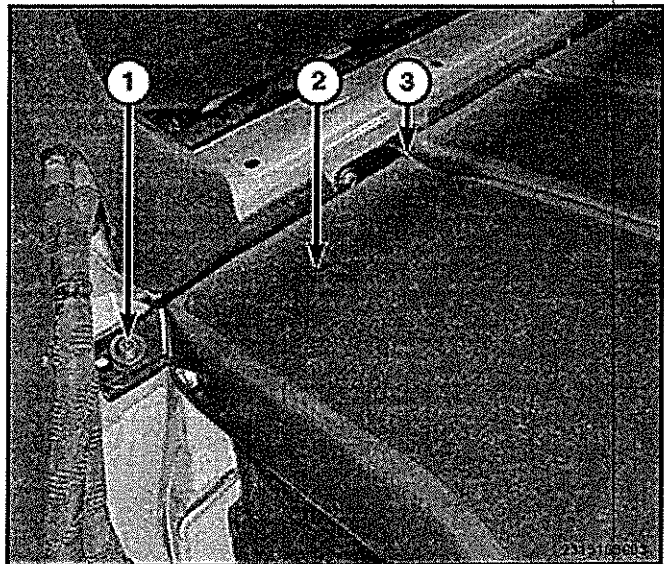


23 - Body / Seats, Rear / SEAT CUSHION / Removal and Installation**REMOVAL AND INSTALLATION****REMOVAL**

1. If equipped, disconnect the center seat belt (2a).
2. Working on each side of the seat, lift firmly at the front of the rear seat cushion (1a) to release the hooks (1b) from the captures (1c).

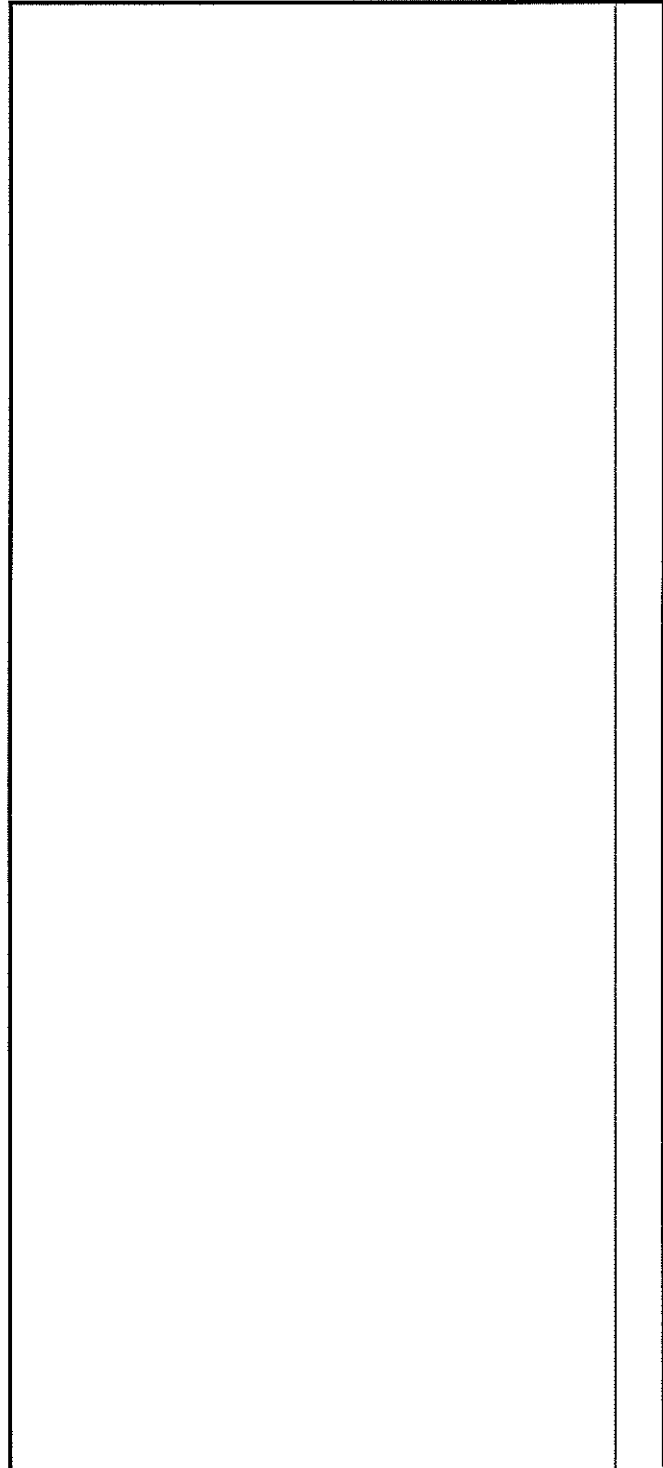


3. Pull the seat cushion (1a) forward to unhook the seat brackets (1b) from the body brackets (1c).
4. If equipped with heated seat, disconnect the wire harness connector (2a).
5. Remove the seat belt bolts (3a) and route the seat belts (3b) from the seat cushion.

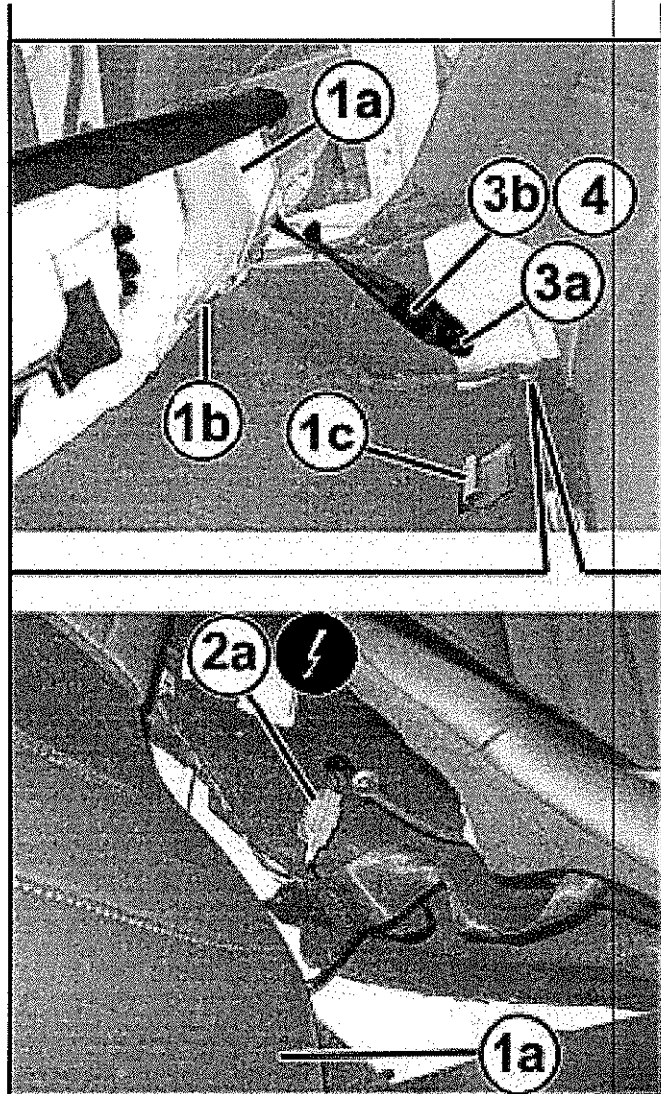


INSTALLATION

1. Route the seat belt (3b) through the seat cushion and install the lower seat belt anchor bolts (3a) (Refer to 10 - Restraints/Specifications).
2. If equipped with heated seat, connect the wire harness connector (2a).
3. Position the brackets (1b) to the floor brackets (1c) and push the rear seat cushion (1a) rearward to engage.

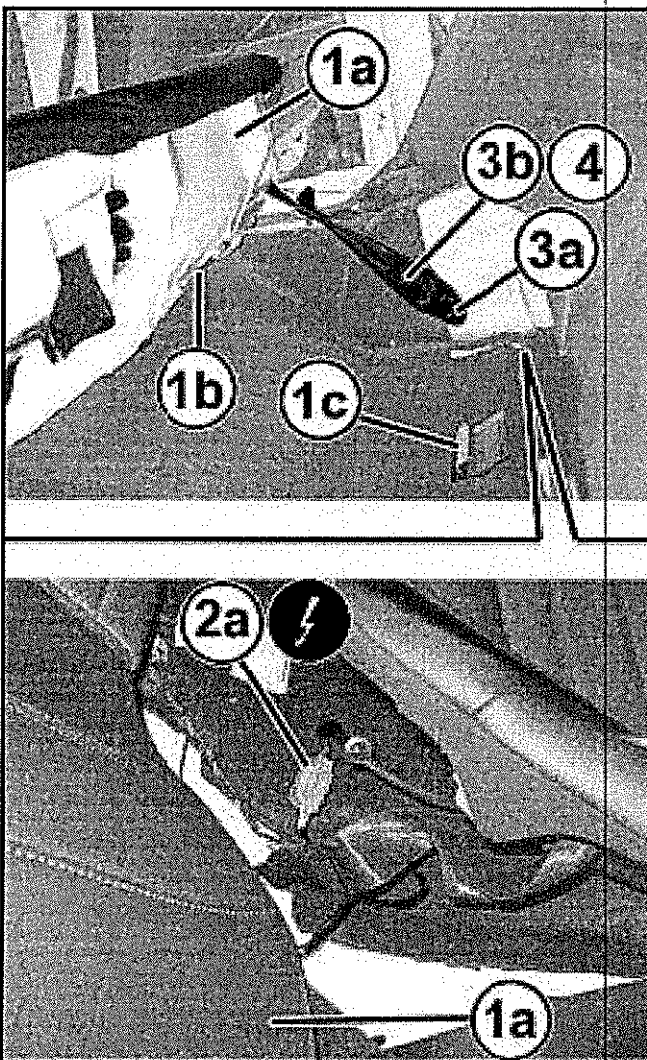


4. Make sure the seat belt tags (2) are positioned properly.
5. Make sure the buckles (3a) are routed through the cushion properly.
6. Working on each side of the seat, locate the rear seat cushion hooks (1b) to the captures (1c) and push down firmly to engage.
7. If equipped, attach the center seat belt buckle (4a).

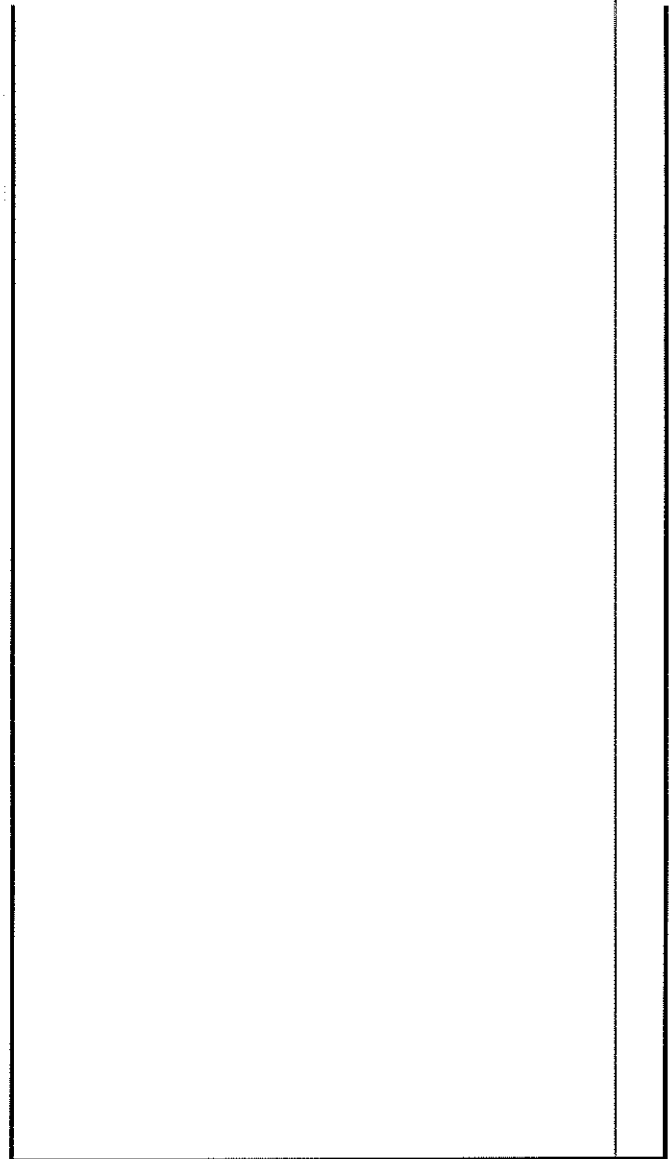

23 - Body / Seats, Rear / BOLSTER, Seat / Removal and Installation**REMOVAL AND INSTALLATION****REMOVAL**

1. Grab the top of the rear seat bolster (1a) and pull forward to release the top hook (1c), then lift to remove.

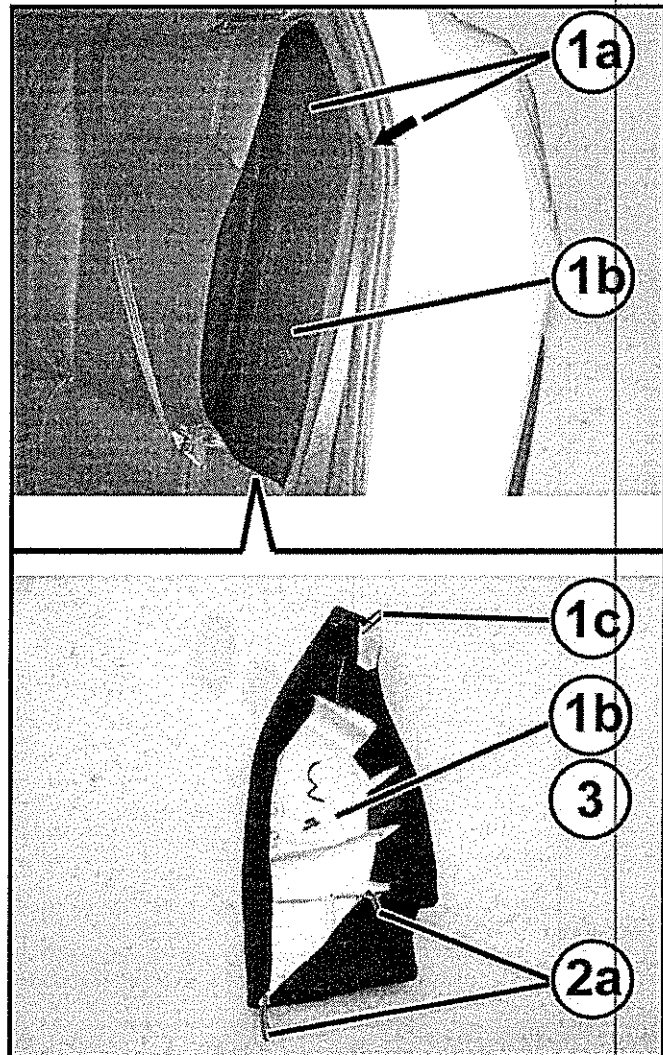**INSTALLATION**

1. Install the lower hooks (1b) into the body, then engage the top hook (1c).

