



REMOVAL AND INSTALLATION

Labor Operations: Click to hide the list of LOPs associated with this procedure

No LOP information available for this service procedure.

REMOVAL



1. To remove the LEFT silencer panel, perform the following.
2. Disconnect and isolate the negative battery terminal.
3. Using a trim stick, remove the LEFT floor console side panel (1a).

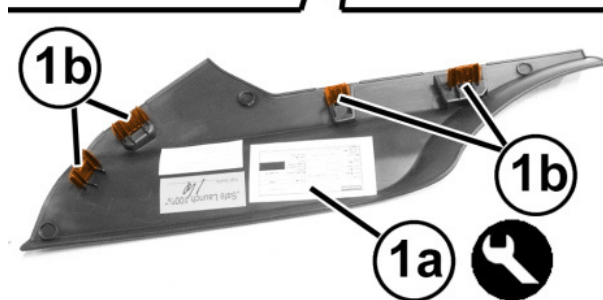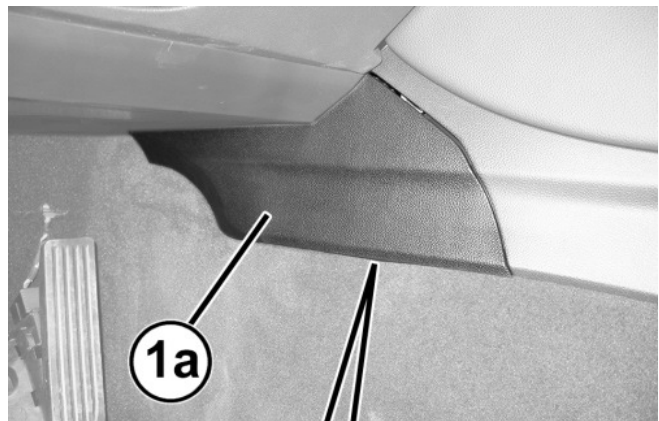

4. Remove the screws from locations (1a).

5. Using a trim stick, release the clips (2a).

6. Slightly lower the LEFT silencer panel (1b), disconnect the wire harness connectors (3a and 3b) and remove.

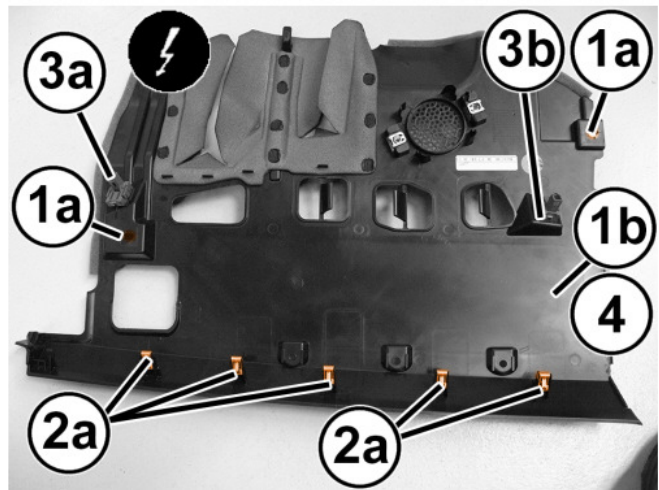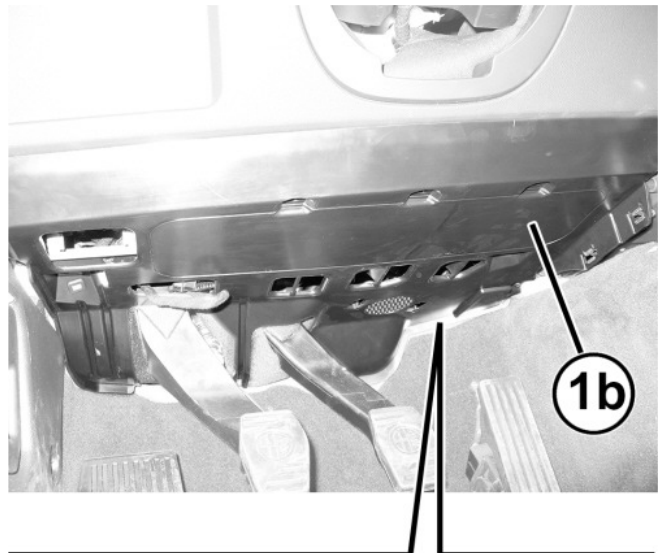



RIGHT ONE:

7. To remove the RIGHT silencer panel, perform the following.
8. Disconnect and isolate the negative battery terminal.
9. Using a trim stick, remove the RIGHT floor console side panel.
10. Remove the passenger side cowl trim panel

11. Remove the screws from locations (1a).

12. Using a trim stick, release the clips (2a and 2b).

13. Slightly lower the RIGHT silencer panel (1b), disconnect the wire harness connectors (3a and 3b) and remove.

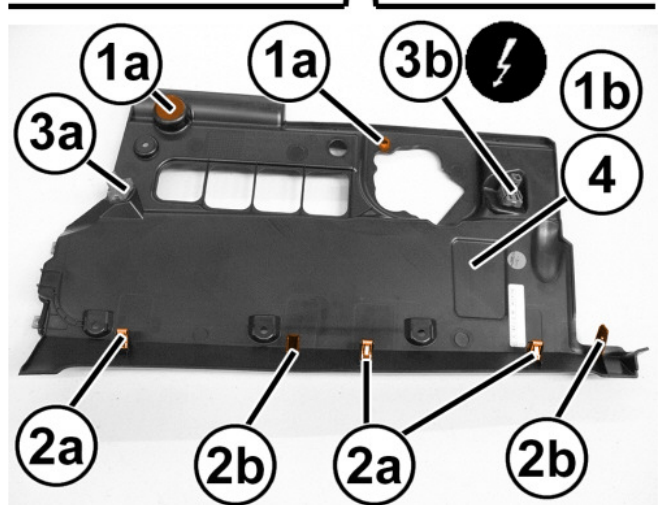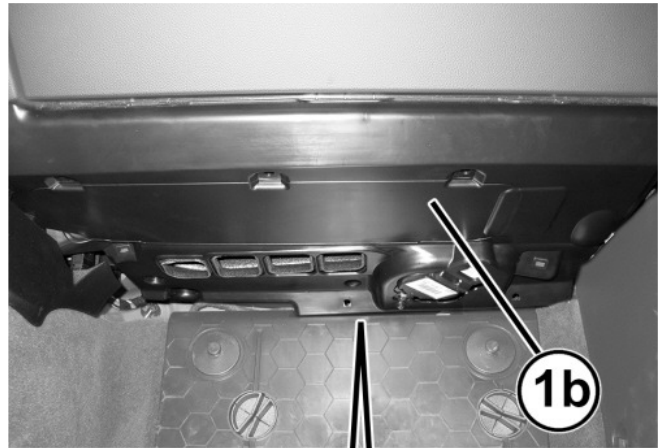


INSTALLATION


1. To install the LEFT silencer panel (1b), perform the following.

2. Connect the wire harness connectors (3a and 3b).



3. Locate the silencer panel and engage the clips (2a).

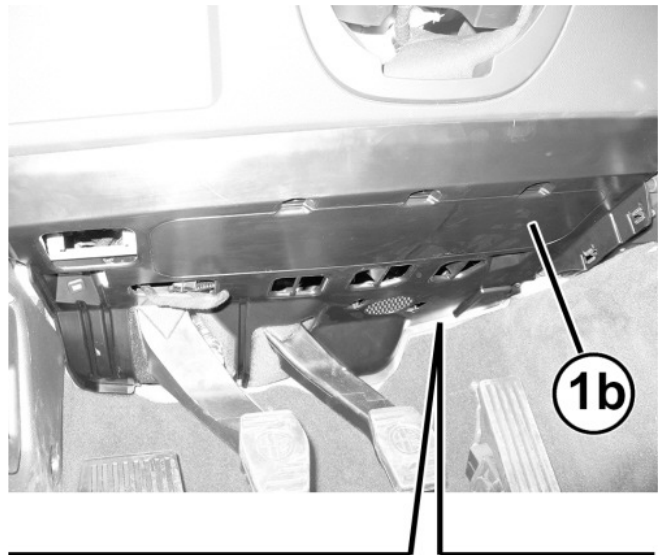

4. Install screws in locations (1a).

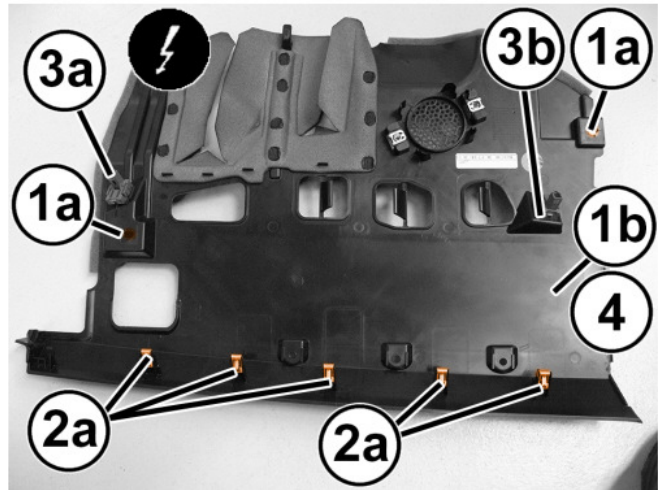

5. Install the LEFT floor console side panel (1a).

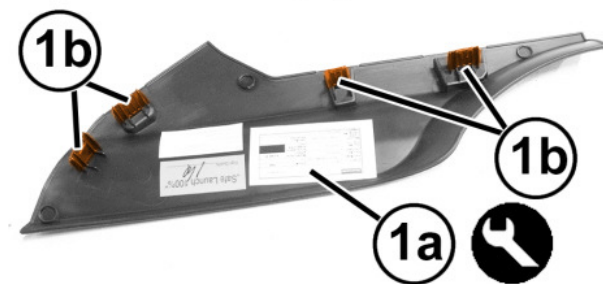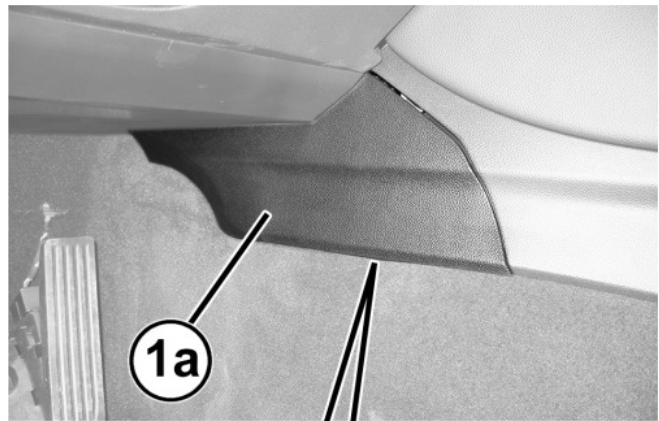

6. Connect the negative battery terminal.



7. To install the RIGHT silencer panel, perform the following.

8. Position the RIGHT silencer panel to the instrument panel.

9. Connect the wire harness connectors (3a and 3b).

10. Install the silencer panel and engage the clips (2a and 2b) fully into the instrument panel.

11. Install the screws at locations (1a) and tighten them securely.

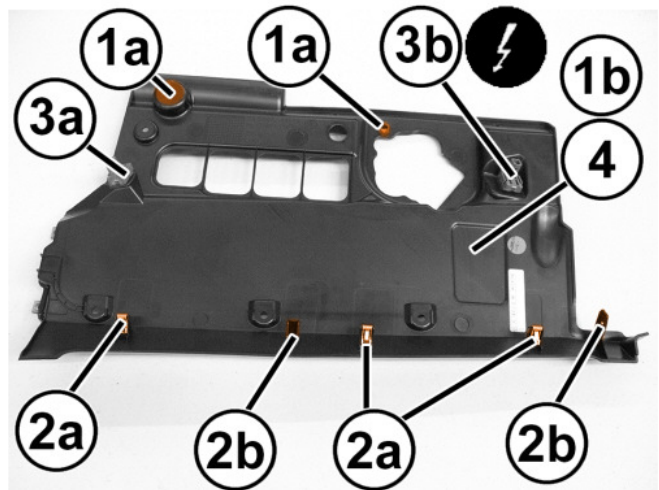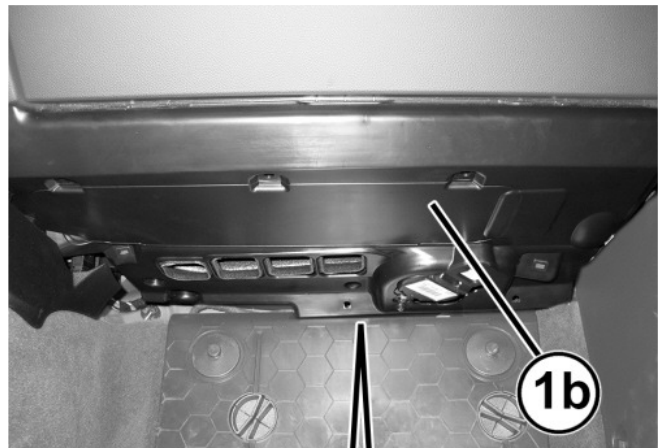

12. Install the RIGHT floor console side panel.

13. Install the passenger side cowl trim panel ([Refer to 23 - Body/Interior/PANEL, Cowl Trim, Side/Removal and Installation](#)).

14. Connect the negative battery terminal.

