

08 - Electrical/8L - Lamps and Lighting/Lamps/Lighting - Exterior/LAMP, Tail/Removal and Installation

OUTER

☒ **Labor Operations:** Click to hide the list of LOPs associated with this procedure

Primary LOP	Related LOP	Description	Skill Level	Skill Category
08508502	-	Lamp, stop and turn signal Rear Right or left	0 - Low Skilled	6B
08508503	-	Lamp, stop and turn signal Rear Right or left	0 - Low Skilled	6B
08508902	-	Lamp, tail and backup liftgate mounted Right Side	0 - Low Skilled	6B
08508903	-	Lamp, tail and backup liftgate mounted Left Side	0 - Low Skilled	6B

NOTE: The tail lamps are LED. The bulbs cannot be changed.


REMOVAL

1. Disconnect and isolate the negative battery cable.


2. Reposition the luggage compartment weatherstrip seal (1a).

3. Using an appropriate tool, remove the retaining button (2a).


4. Reposition the edge (3a) of the side trim.

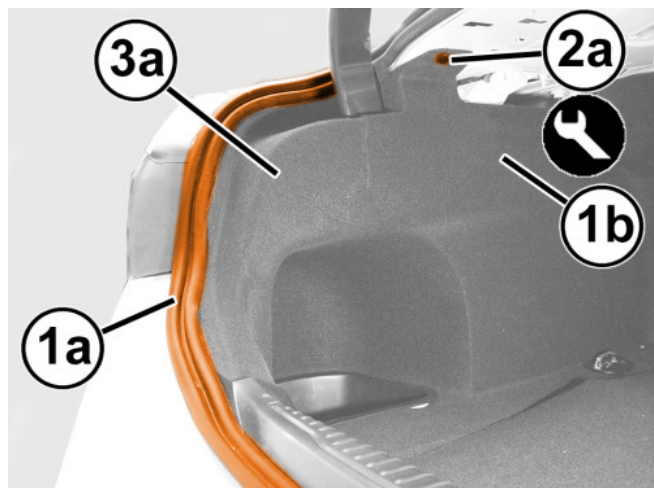

5. For the right side outer lamp only, turn and disengage the retainers (1a), then remove the lid (1b) by disengaging the retainers (1c).

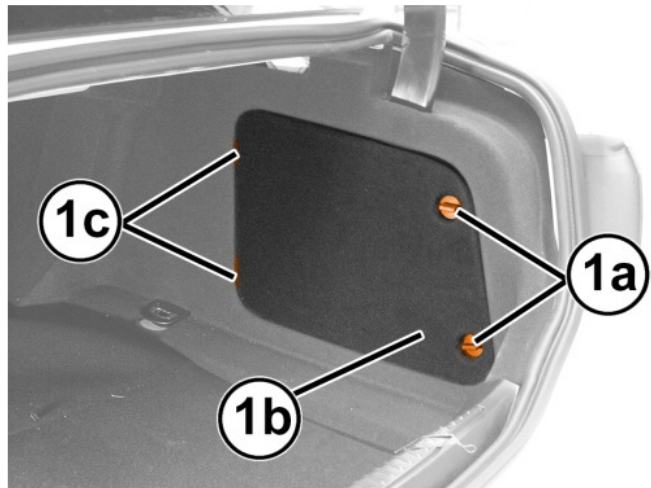



6. For both the left and right side, remove the fastener (1a) securing the tail lamp.

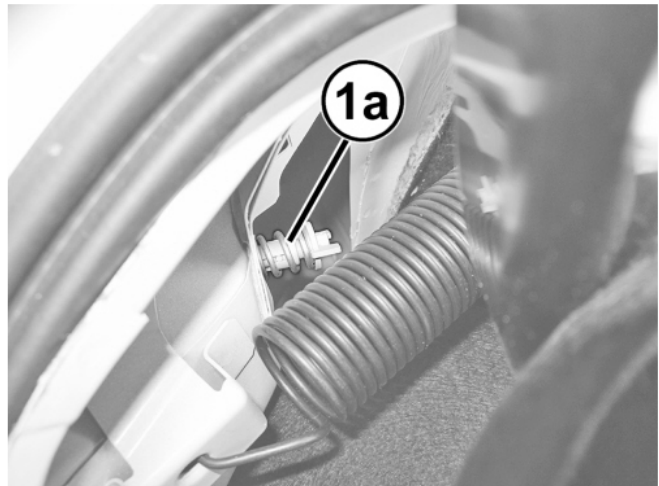

7. Pull the lamp outward (1a) allowing the inner retainers to disengage (1b).

8. Disconnect the wiring harness connector (2) from the lamp.

9. Remove the lamp.

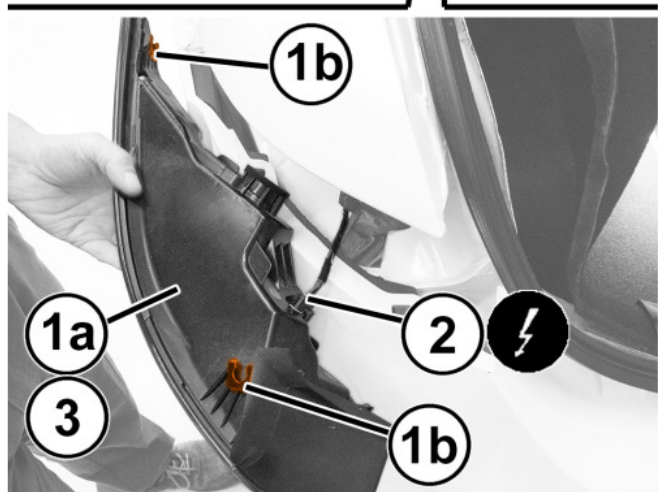
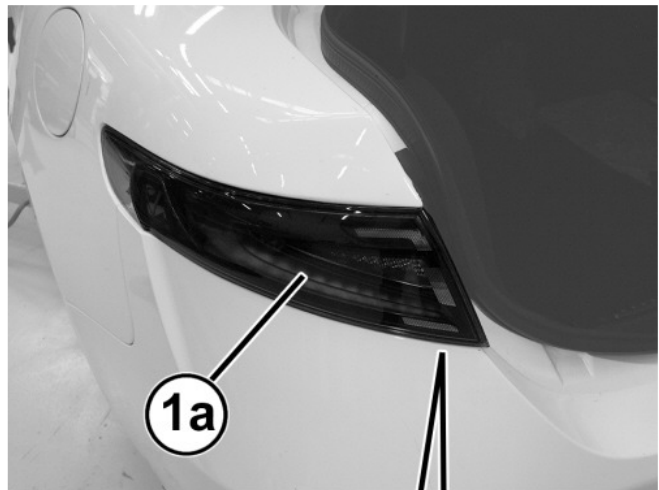


INSTALLATION


1. Position the lamp to the vehicle for installation.

2. Connect the wiring harness connector (1) to the lamp.


3. Position the light (2a) and engage the inner retainers (2b).

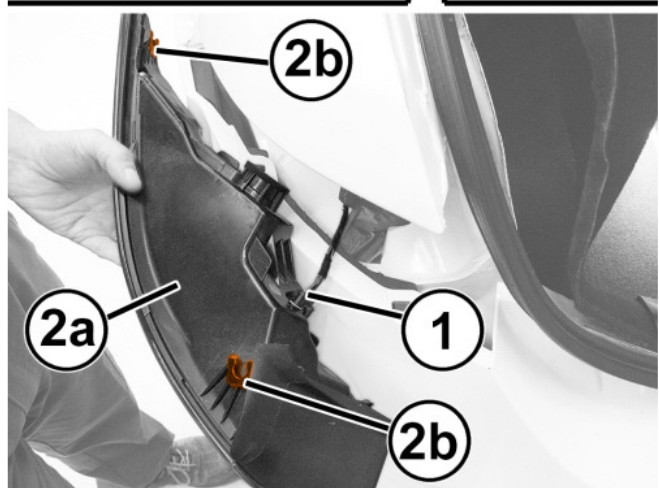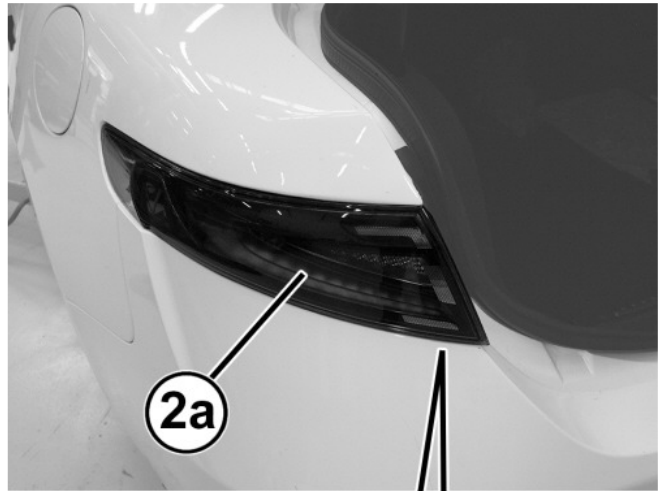

4. Install the lamp fastener (1a).

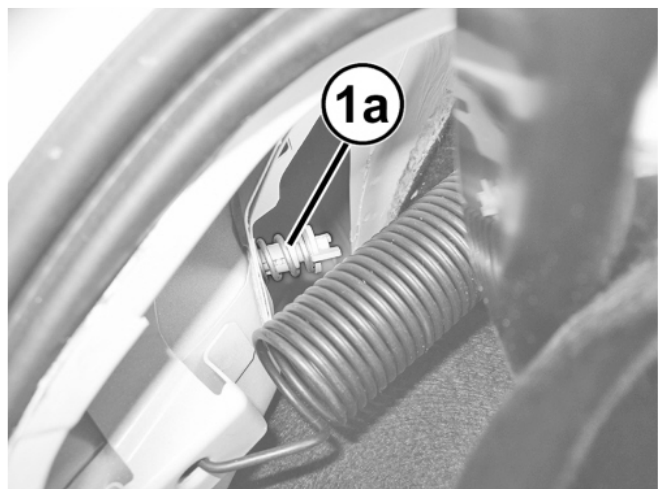


- For the right side lamp, position the lid and engage all retainers (1b and 1c).

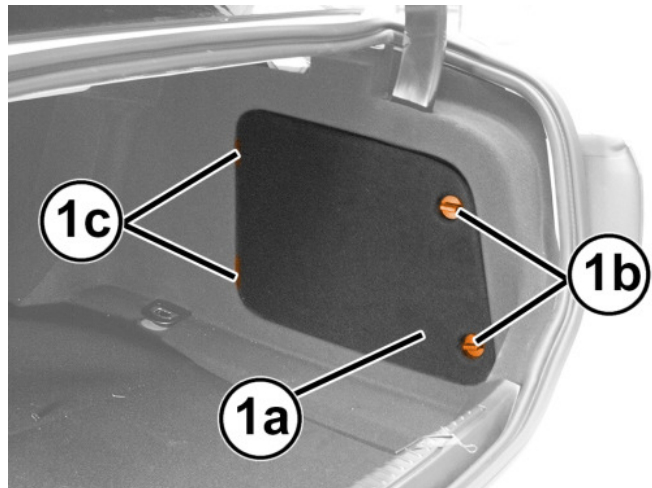

- For the left side lamp,

- Position the side lining (1a) back to the installed position.

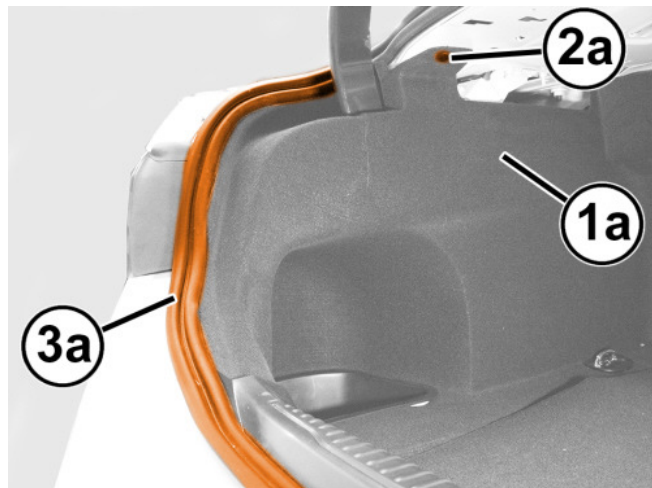

- Install the retaining button (2a).

- Engage the weatherstrip seal (3a).

- Connect the negative battery cable.

13 - Frame and Bumpers/Bumpers/FASCIA, Rear/Removal and Installation


2.0L REMOVAL AND INSTALLATION

Labor Operations: Click to hide the list of LOPs associated with this procedure

Primary LOP	Related LOP	Description	Skill Level	Skill Category
13200502	-	Fascia, rear One piece	1 - Semi Skilled	1A


REMOVAL

1. Raise and support the vehicle, ([Refer to 04 - Vehicle Quick Reference/Hoisting/Standard Procedure](#)).
2. Disconnect and isolate the negative battery cable.
3. Remove the left and right tire and wheel assembly ([Refer to 22 - Tires and Wheels/Removal and Installation](#)).
4. Remove the left and right outer tail lamps ([Refer to 08 - Electrical/Lamps/Lighting - Exterior/LAMP, Tail/Removal and Installation](#)).
5. Work on both sides of the vehicle.
6. Remove the retaining screws (1a) securing the rear wheelhouse splash shield to the rear fascia(1b).
7. Remove the retaining clips (2a).

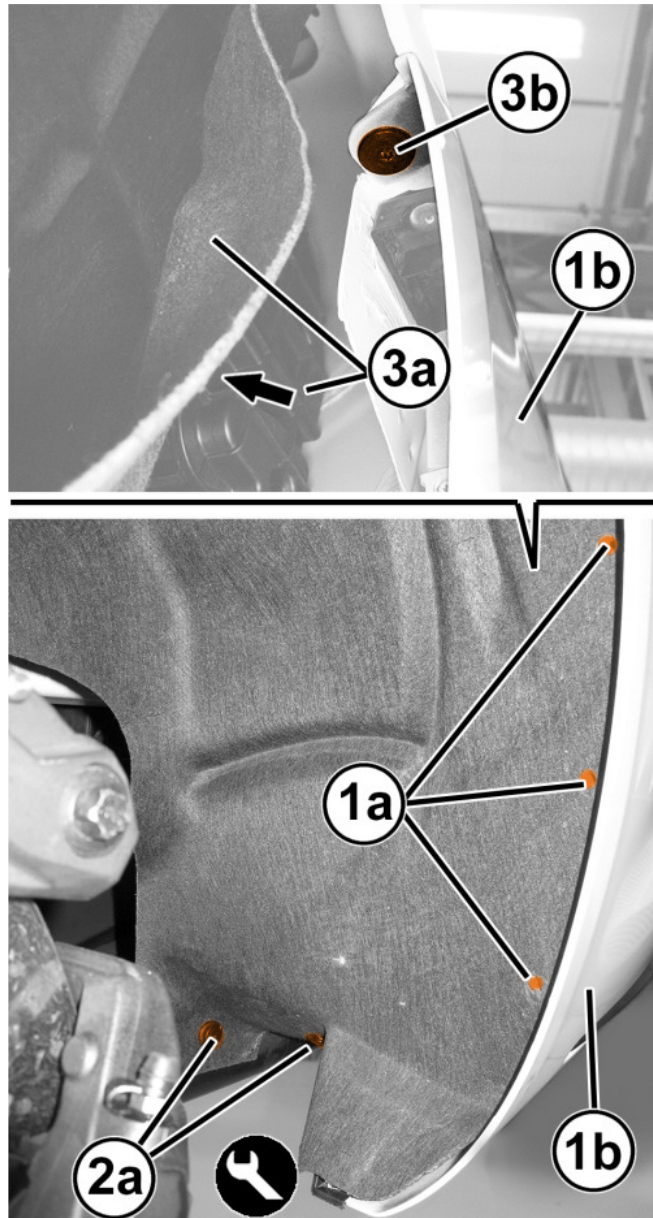


- Position aside the edge (3a) of the rear wheelhouse splash shield and remove the side screw (3b) retaining the fascia (1b) to the body.

- Remove the retaining screws (1a) securing the rear fascia (1b).

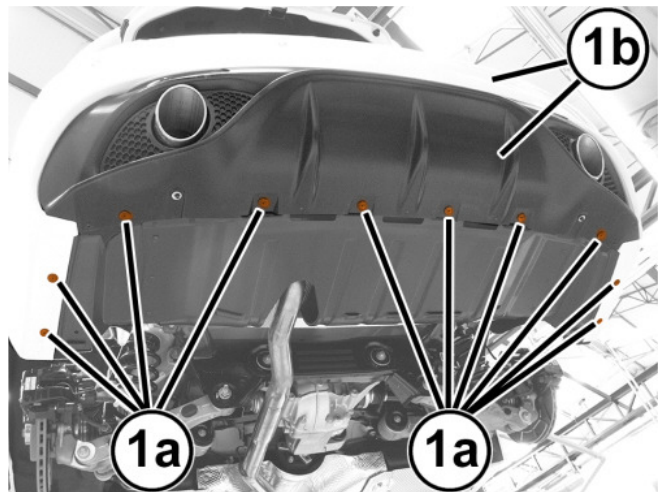

- Lower the vehicle.

- Release the rear fascia (1a), release the side retainers (1b) and middle strip (1c).

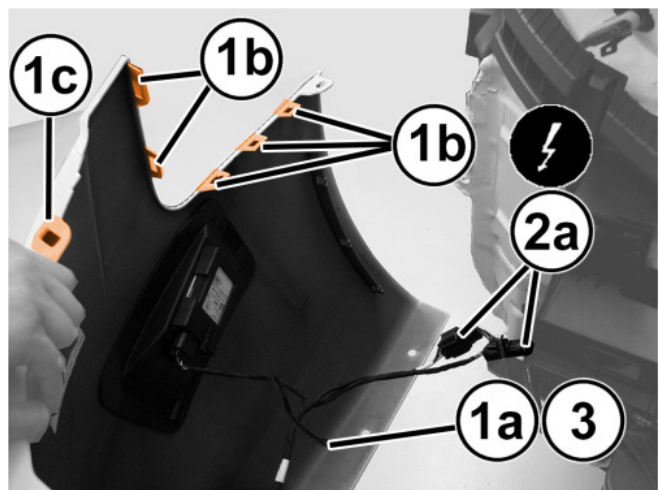


- Release the retainers and disconnect the electrical connection (2a) of the rear fascia wiring.


- Remove the rear fascia.

INSTALLATION


1. Connect the wiring connectors (1a) of the rear fascia wiring and secure the retainers.
2. Position the rear fascia (2a) in place, secure the side retainers (2b) and the middle strip (2c).

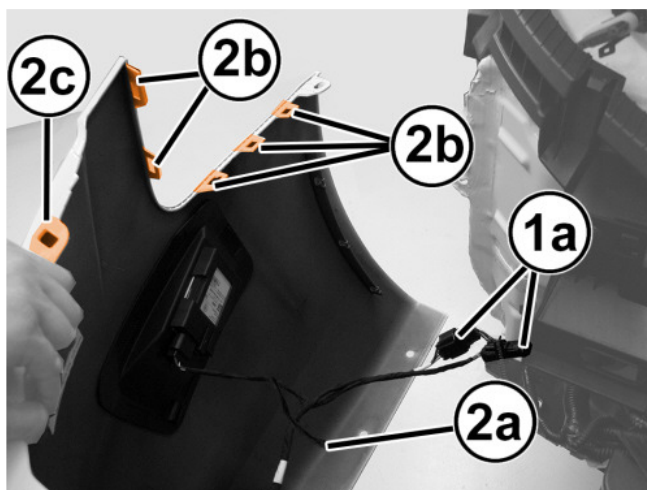

3. Install the lower retaining screws (1a) of the rear fascia (1b) and tighten securely.

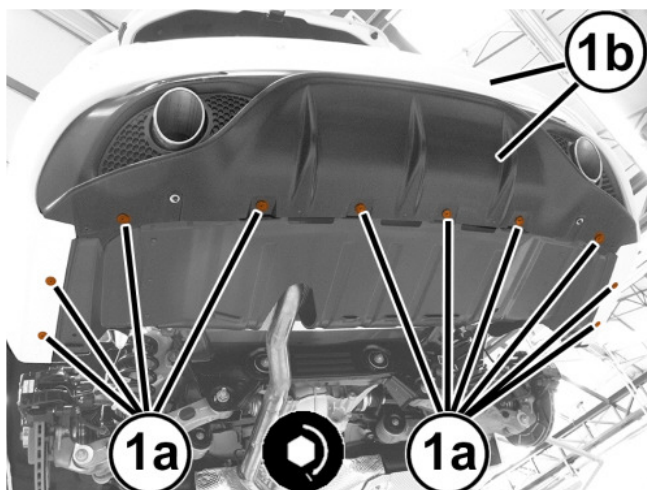


4. Install the retaining side screws (1a) securing the rear fascia (1b) to the body. Securely tighten the screws.

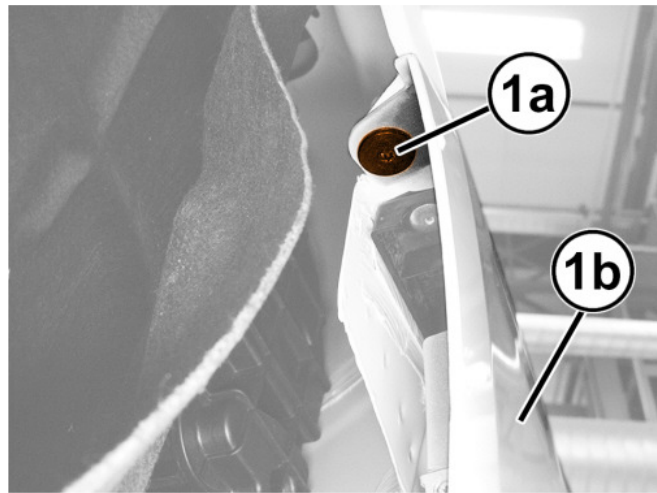

5. Install the retaining clips (2a) of the splash shields.

6. Install the retaining screws (3a) securing the wheelhouse splash shields to the rear fascia (1b). Securely tighten the screws.

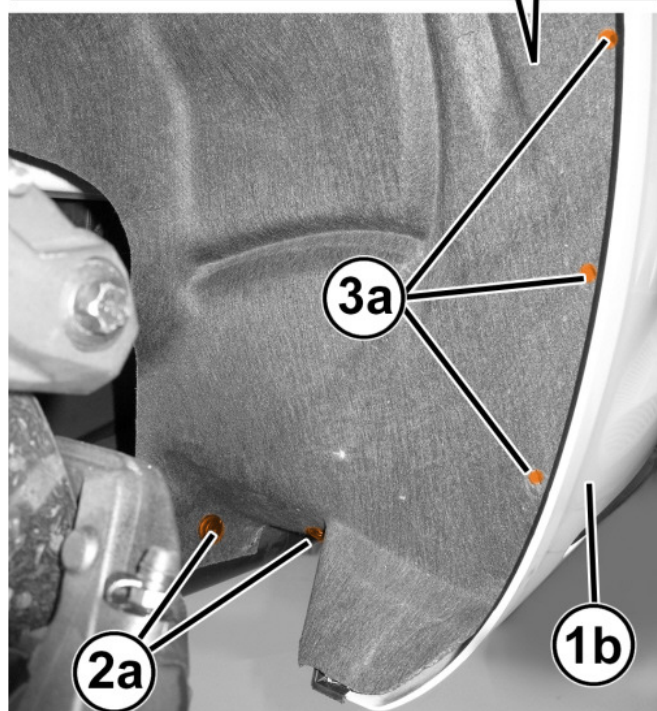

7. Install the left and right outer tail lamps ([Refer to 08 - Electrical/Lamps/Lighting - Exterior/LAMP, Tail/Removal and Installation](#)).

8. Install the left and right tire and wheel assemblies ([Refer to 22 - Tires and Wheels/Removal and Installation](#)).

9. Connect the negative battery cable.